

## INSTRUCTION MANUAL

### Protection Made Simple

Master Code: \_\_\_\_\_ System Entry Time: \_\_\_\_\_

Pass Code: \_\_\_\_\_ System Exit Time: \_\_\_\_\_

Account Number \_\_\_\_\_

#### *MASTER CODE*

Your four digit Master Code is used to turn your security system ON or OFF. Your four digit Master Code will also shut OFF the siren if you accidentally set off your alarm.

#### *ARMING THE SYSTEM*

To arm your system, wait for the Green Ready Light, then enter your four digit Master Code, The Red Armed Light will come on letting you know that you have \_\_\_\_\_ seconds to exit. If you make a mistake, just press the (#) and start again.

#### *DISARMING THE SYSTEM*

When you enter through the delay door(s) you will hear your keypad buzzing, letting you know that you have \_\_\_\_\_ seconds to enter your four digit master code to turn OFF your system. If you make a mistake, just press the (#) and start again.

#### *INTERIOR PROTECTION*

Your system *has has not*, been designed so that when you turn your alarm system on and stay home, it will automatically turn off any Interior Protection. Once you go upstairs and want to arm the motion detectors, press \* 1 on the control and the bypass light will go out. Your system will automatically turn on the same detectors when you leave, giving you full protection.

Your system *has has not*, been designed so that when you turn your alarm system on and stay home, it will automatically turn off any Interior Protection. Your system will automatically turn on the same detectors when you leave, giving you full protection.

#### *WINDOW PROTECTION*

On systems with the "double contacts," so you can turn your system on with the windows open, turn your system OFF before you open or close your windows. After you have placed the windows to the proper position, you may turn your system back ON.

#### *ZONE BYPASSING*

This will allow you to temporarily bypass a zone when access is needed to part of the protected while the system is armed. Zones that are temporarily out of service can also be bypassed allowing partial protection, until repairs can be made.

Zones cannot be bypassed after the system is ON.

Press (\*) Then (1) Then zone number to bypass (01-16), you must enter a two digit number for each zone. Press (#) when done.

As each zone is bypassed, the zone light will come on.

### *ADD ADDITIONAL CODES*

Up to 14 additional codes may be programmed.

For Codes 1-8: Press (\*) Then (5) Then (your code) Then (2,3,4,5,6,7 or 8) Then (new 4 digit code) Then (#) when done.

For Codes 9-15: Press (\*) Then (5) Then (your code) Then 9 Then (1,2,3,4,5,6,or 7) Then (new 4 digit code) Then (#) when done.

NOTE: That the (\*) and (#) cannot be used in a code.

### *REMOVE ADDITIONAL CODES*

Press (\*) Then (5) Then (your Code) Then (1,2,3,4,5,6,7 or 8) Then (\*\*\*\*) Then (#) when done. Entering (\*\*\*\*) erases a code.

### *PANIC BUTTONS*

There are three buttons on the touch pad labelled (F) FIRE, (E) MEDICAL, (P) POLICE. You must press and hold the desired panic button for 2 seconds to activate.

### *ALARM TEST*

We recommend that you test your system monthly.

Press (\*) Then (6) Then your Code (\_\_\_\_\_) Then (8)

Your system will test Keypad(s), Siren(s), Bell(s), and Battery for about 2 seconds.

Then Press (#) to reset.

### *RESIDENTIAL FIRE ALARM RESET*

Press any button on touch pad to silence alarm, this will give you 2 minutes to clear away smoke from detector. Then press (\*) then hold down the (4) key for several seconds. if the smoke has cleared, the detector will reset.

If the smoke has not cleared from the detector, open a window or door and fan clean air into the detector and try resetting again.

### *ALARM MEMORY DISPLAY*

If the Memory light is ON, an Alarm has occurred during the last Armed period. The Alarm Memory

will automatically be displayed when the system is disarmed.  
Press (\*) then (3) to display the zone which caused the Alarm.  
Press (#) To Return To Ready.

*VIEWING TROUBLE CONDITIONS*

Your Master Control continuously monitors a number of possible trouble conditions. If one of these conditions occur, The Touch Pad will beep twice every 10 seconds and also the TROUBLE indicator will light. Press any Button to silence beeping. The Trouble indicator will remain ON until trouble condition is cleared.

*TO VIEW TROUBLE*

Press (\*) Then (2) to display type of trouble. A zone light will come on to indicate which type of trouble exists.

ZONE LIGHT	TYPE OF TROUBLE
1.....	Low or disconnected standby battery
2.....	Loss of AC power
3.....	Day circuit trouble
4.....	Telephone line problem
5.....	Communication problem
6.....	Bell circuit failure
7.....	Fire alarm circuit open
8.....	Loss of time on system clock

Press the (#) key when done.

AMERICAN ALERT  
4640 North Ridge East  
Geneva, Ohio 44041

*SALES OR SERVICE*.....Call 466-7233 OR 1 800 852-2482

*FALSE ALARMS OR TESTING*.....Central Station 1 800 272-1097

*UPON REQUEST*..... An Alarm Certificate will be issued to your insurance companies for any discount credits.